

Audio Interface Harness Adapter

Installation Guide (for BOSE equipped 2009-14 GT-R)

1. Ensure the car is OFF and locate the BOSE Amp under the driver's seat if you purchased a harness adapter that plugs into the Bose Amp Harness. *For seats with side air bag, disconnect the car battery cable from the negative terminal and wait for at least 3 minutes. Then disconnect the seat's harness connector before removing the seat.*

If you purchased an adapter that plugs into the factory subwoofer harness, locate the connectors at the subwoofer housing after removing the rears seats and center pieces.

2. Use a medium sized flathead screwdriver to press in the latching clip & **carefully disconnect** the connectors from the Bose Amp and/or Subwoofer that will attach to the harness adapter.
3. Plug the adapter into the corresponding connectors as appropriate. Also make any connections between the adapter itself, if applicable.
4. Refer to the harness adapter's labeling and the diagram below to connect your audio equipment.


The Bose radio outputs low-level differential balanced signals (that go through the specifically designed RCA connections of the harness adapter). Therefore, we recommend audio equipment that has differential inputs, or RCA inputs capable of accepting preamp and speaker-level signals. Otherwise, you may need to use an appropriate Line Output Converter to avoid sound quality issues.

- Speaker Wiring (if your adapter has it) is labeled with a speaker number, in reference to the diagram below. Speaker wiring goes to the Output of your amplifier(s).

Note: Gray or Red wire connections are + (Positive). Black wire connections are - (Negative).

SPEAKER WIRING DIAGRAM

- 1 - Center Speaker
- 2 - Front Left Mid and Tweeter
- 3 - Front Right Mid and Tweeter
- 4 - Front Left Door Speaker
- 5 - Front Right Door Speaker
- 6 - Rear Left Speaker
- 7 - Rear Right Speaker

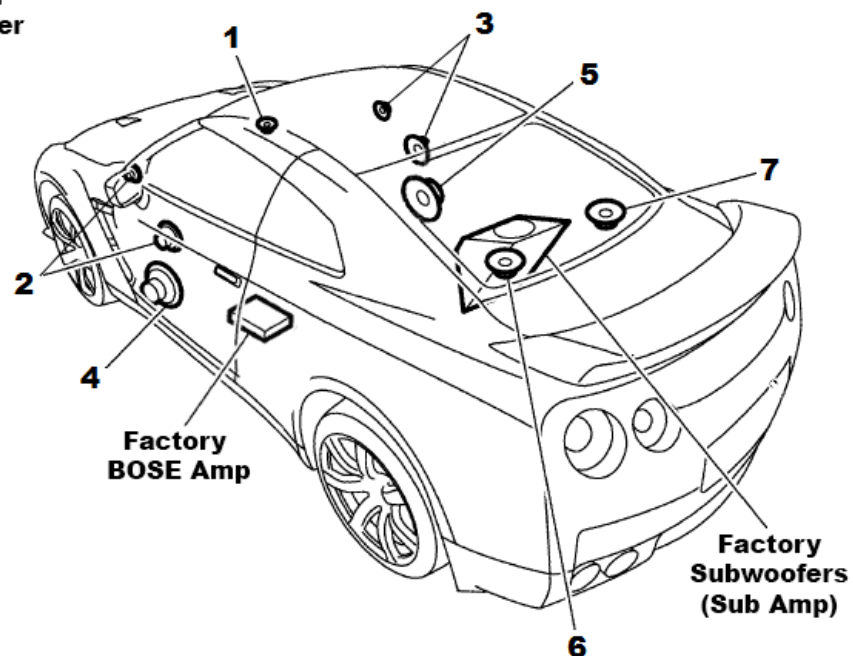



5. After making the connections you want to your audio equipment, be sure to **properly secure** any remaining/unused connections of the adapter to avoid any shorts or damage.
6. Once all your connections have been made and everything is secure, you can turn the car on to test everything out. Ensure everything looks and sounds ok.
7. Re-install any removed car parts and then reconnect the negative battery terminal, if necessary.
8. Reset the car windows auto-up function (necessary when battery disconnected): Press and hold the window down button until the window is fully open. Release. Pull and hold the window up function for 6 seconds. Windows should now go up/down properly with the auto function.
Repeat for all windows as necessary (can do two at once).
9. Adjust your equipment settings as necessary, and that's all there is to it!

Enjoy Your New Upgrade!