


## Audio Interface Harness Adapter

### Installation Guide (for FENDER equipped 2019-24 TITAN)

1. Ensure the car is OFF and locate the FENDER Amp under the front driver's seat or factory sub under the front passenger seat (see diagram below), depending on the type of kit you ordered.
  2. Use a medium sized flathead screwdriver to press in the latching clip & **carefully disconnect** the connectors from the Fender Amp or Subwoofer that will attach to the harness adapter.
  3. Plug the adapter into the corresponding connectors as appropriate. Also make any connections between the adapter itself, if applicable.
  4. Refer to the labeling on the harness adapter to connect your audio equipment.
    - Speaker Wiring (if your adapter has it) is labeled with a speaker number, in reference to the diagrams below. Speaker wiring goes to the Output of your amplifier(s).
- Note: Gray or Red wire connections are + (Positive). Black wire connections are - (Negative).

### SPEAKER WIRING DIAGRAM

- 1 - Center Speaker**
- 2 - Front Left Tweeter and Speaker**
- 3 - Front Right Tweeter and Speaker**
- 4 - Front Left Door Speaker**
- 5 - Front Right Door Speaker**
- 6 - Rear Left Tweeter and Speaker**
- 7 - Rear Right Tweeter and Speaker**
- 8 - Subwoofer**

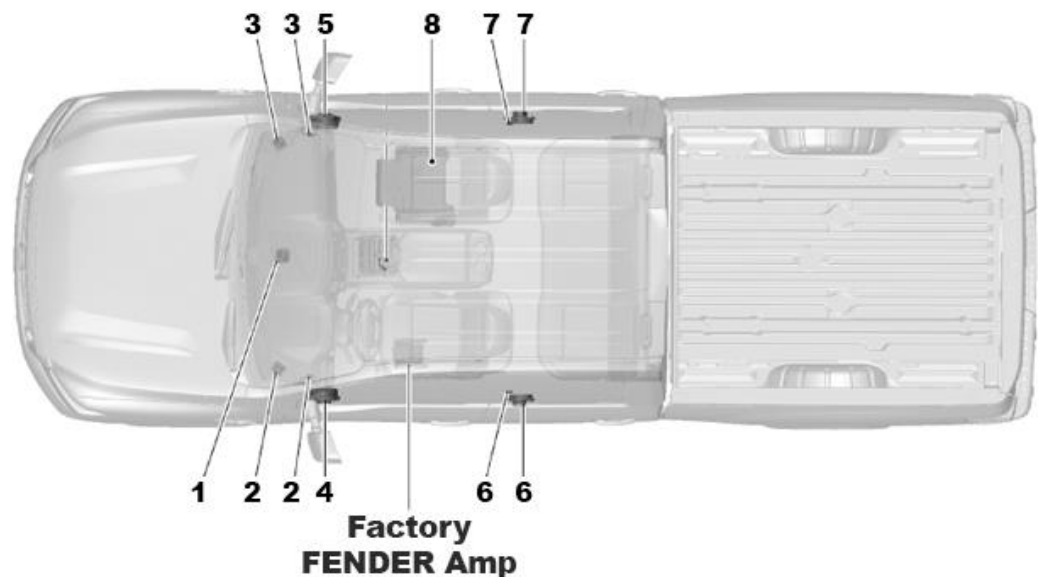

5. After making the connections you want to your audio equipment, be sure to **properly secure** any remaining/unused connections of the adapter to avoid any shorts or damage.
6. Once all your connections have been made and everything is secure, you can turn the car on to test everything out. Ensure everything looks and sounds ok.
7. Adjust your equipment settings as necessary, and that's all there is to it!