


Audio Interface Harness Adapter (BOSE equipped 2017-20 Rogue)

Installation Guide

1. Ensure the car is OFF and locate the BOSE Amp under the front passenger seat or the BOSE Subwoofer in the trunk.
 2. Use a medium sized flathead screwdriver to press in the latching clip & **carefully disconnect** the connector(s) from the Bose Amp and/or Subwoofer that will attach to the audio interface harness adapter(s) you ordered.
 3. Once disconnected, plug the adapter(s) into the corresponding connectors for the BOSE Amp or Subwoofer, as appropriate. Also make any connections between the adapter itself, if applicable.
 4. Refer to the labeling on the audio interface harness adapter to connect your audio equipment.
Keep in mind that the BOSE radio outputs low-level differential balanced signals (which go through the specifically designed RCA cable of the adapter). So if you purchased an adapter with RCA connections, you'll want to use audio equipment that has differential balanced inputs. Otherwise, you may need to use an appropriate LOC (Line Output Converter) to avoid noise issues and/or reduced sound quality.
- If your adapter supports connecting audio equipment to the car speakers through the Bose Amp Harness, the diagram below indicates which speakers the numbered wiring connects with.

SPEAKER WIRING DIAGRAM

- 1 - Center Speaker
- 2 - Front Left Speaker and Tweeter
- 3 - Front Right Speaker and Tweeter
- 4 - Rear Left Speaker
- 5 - Rear Right Speaker
- 6 - Subwoofer

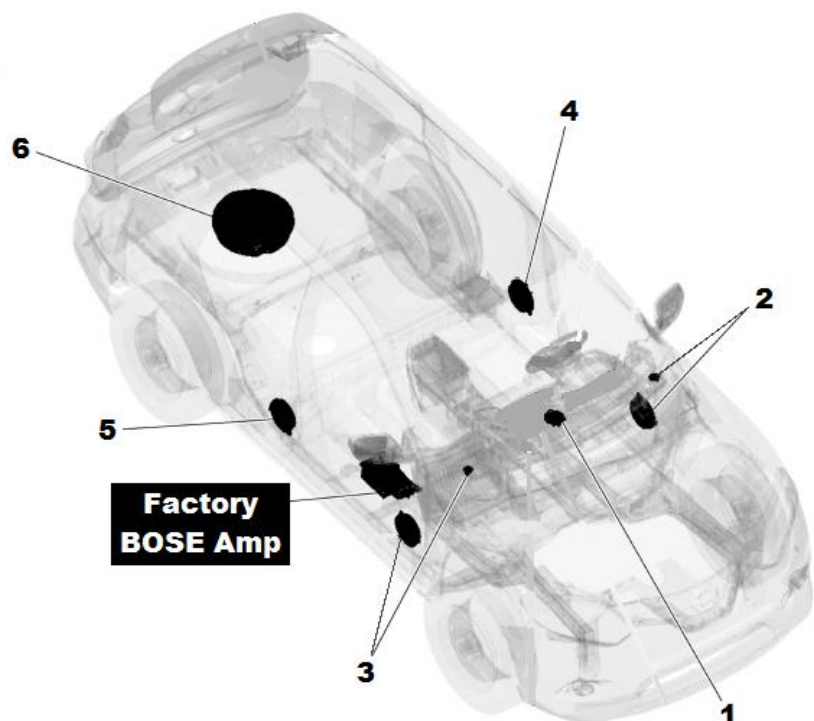



5. After making the connections you want to your equipment, be sure to **properly secure** any remaining/unused connections of the harness adapter to avoid any shorts or damage.
6. Once all of your connections have been made and everything is secure, you can turn the car on to test everything out. Ensure everything looks and sounds ok.
7. Adjust your equipment settings as necessary, and that's all there is to it!

Congratulations. Enjoy Your Audio Upgrade.